


## REPLACE A LEADING EDGE

**REMOVE THE LEADING EDGE:** 1. Open the end of the leading edge and tie up a small rope at the end. This rope will help to put the tube in its place 2. Remove all the valves and ONE PUMP connection 3. Open the central zipper and remove the tube, let the rope inside the wing. Proceed on the same way on the other side of the Kite.




**PUT BACK THE LEADING EDGE:** 1. Sprinkle the tube with some baby powder, put the tube in a plastic bag and remove. 2. Fold the half of the leading edge, on a flat folding, and check that the valves are on the good side. Double check that the kite is positioned on flat position. 3. With some help, put the tube back in the leading edge, and check that the bladder is not twisted. Make the same on the other side.

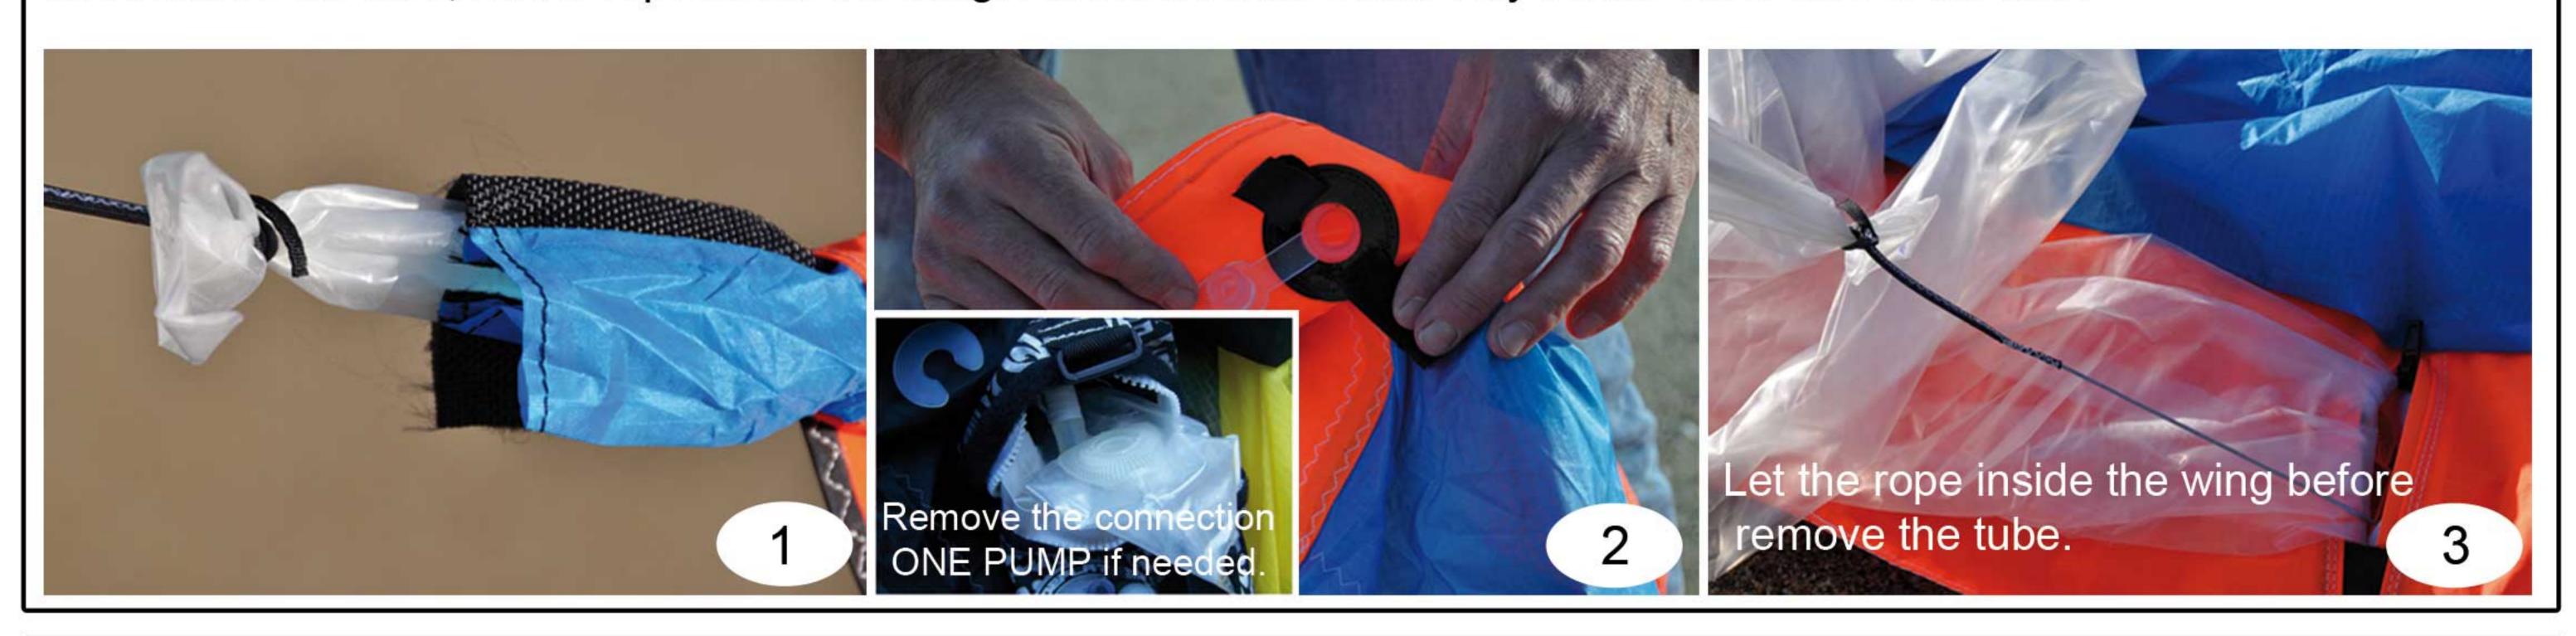






4. Reconnect the One Pump system if needed, inflate slightly (take care with the possible hernia) and massage the bladder to make it go back to its own place. 5. Inflate and close the Velcro. 6. Now you can end up inflate the bladder, check there is no twists. Proceed slowly, inflate and check the bladder.

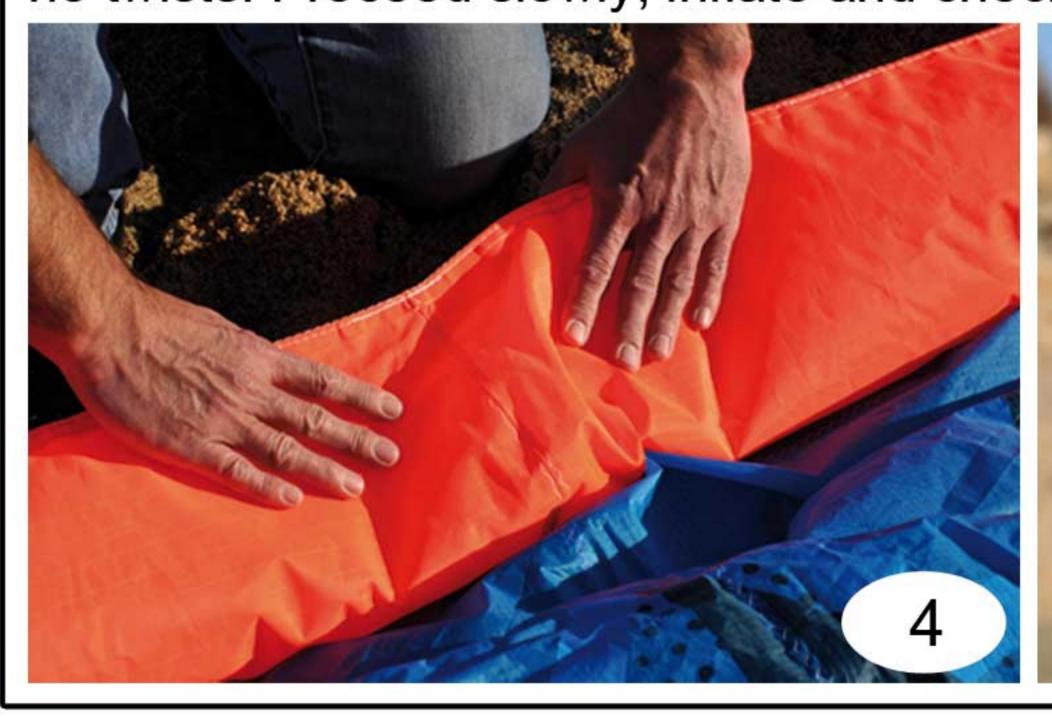





IMPORTANT: 1. If one of the valves is plunging and twisting into the bladder, the tube might be twisted. Stop, deflate the bladder, take it out and put it back again. 2. Double check that the bladder is not twisted when you inflate. Deflate immediately Put the bladder back in position, while massaging and shaking the bladder. And inflate again. 3. Do not forgot to close the Velcro at the ends.

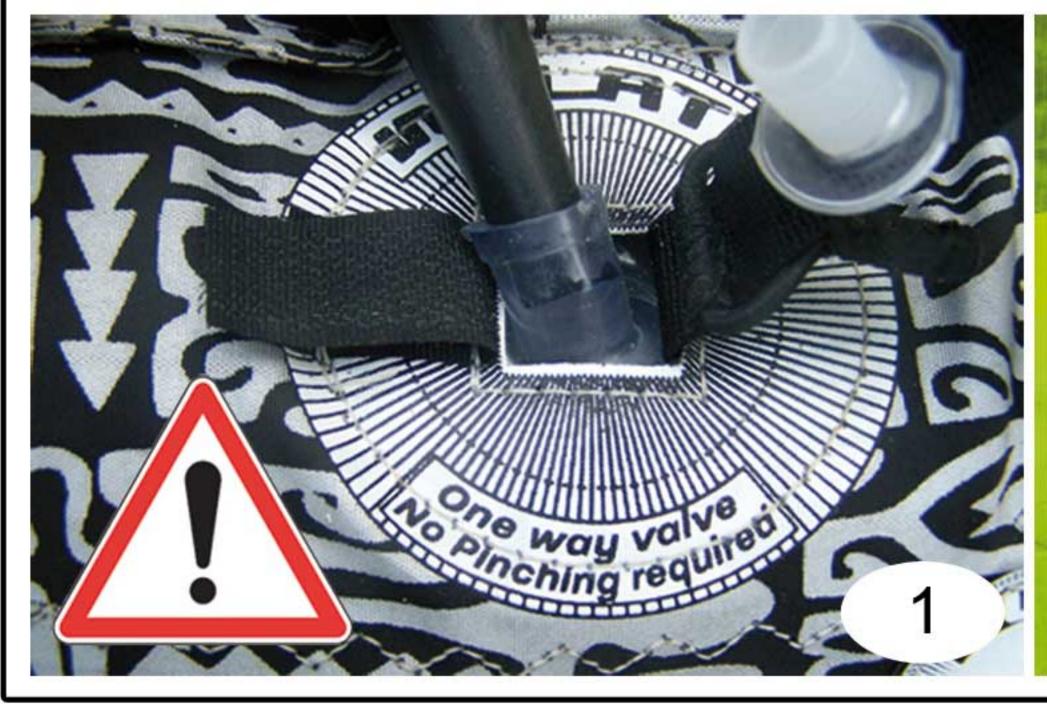





é